

## HI93414 Turbidity

Range	0.00 to 1000 NTU
Range Selection	automatic
Resolution	0.01 (0.00 to 9.99 NTU); 0.1 (10.0 to 99.9 NTU) 1 (100 to 1000 NTU)
Accuracy	±2% of reading plus 0.02 NTU
Repeatability	±1% of reading or 0.02 NTU, whichever is greater
Stray Light	< 0.02 NTU
Light Detector	silicon photocell
Method	ratio nephelometric method (90° and 180°), ratio of scattered and transmitted light; adaptation of the USEPA method 180.1 and standard method 2130 B
Measuring Mode	normal, average, continuous
Turbidity Standards	< 0.1, 15, 100 and 750 NTU
Calibration	two, three or four-point calibration


### HI93414 Free and Total Chlorine

0.00 to 5.00 mg/L
0.01 mg/L (0.00 to 3.50 mg/L); 0.10 mg/L (above 3.50 mg/L)
±0.02 mg/L @ 1.00 mg/L
silicon photocell with 525 nm narrow band interference filter
adaptation of the USEPA method 330.5 and standard method 4500-Cl G.
1 mg/L free chlorine, 1 mg/L total chlorine
one-point calibration

#### HI93414 General Specifications

Light Source	tungsten filament lamp
Lamp Life	greater than 100,000 readings
Log Memory	200 records
Serial Interface	USB or RS 232
Environment	0 to 50°C (32 to 122°F); RH max 95% non-condensing
Power Supply	1.5V AA alkaline batteries (4) or AC adapter; auto-off after 15 minutes of non-use
Dimensions / Weight	224 x 87 x 77 mm (8.8 x 3.4 x 3.0") / 512 g (18 oz.)
Ordering Information	Hi93414-01 (115V) and Hi93414-02 (230V) is supplied with sample cuvettes and caps (5), calibration cuvettes for turbidity (Hi98703-11), calibration cuvettes for chlorine (Hi93414-11), silicone oil (Hi98703-58), cuvette wiping cloth, scissors, batteries, AC adapter, instruction manual and rugged carrying case.



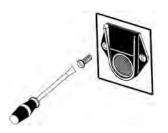

# iButton® Tags are Easy to Install

Install tags near your sampling points for quick and easy iButton® readings. Each tag contains a computer chip with a unique identification code encased in stainless steel. You can install a practically unlimited amount of tags.



HI920005 Tag holders with tags (5)

## Fast Tracker™

For advanced, field applications, the HI93414 is equipped with Fast Tracker™ Tag Identification System (T.I.S.) that makes data collecting and management simpler than ever. Fast Tracker™ allows users to record the time and location of a specific measurement or series of measurements using iButton® tags near sampling points for quick and easy readings. Each iButton® tag contains a computer chip with a unique identication code encased in stainless steel.

